


# INSTALLATION GUIDE - WM2206

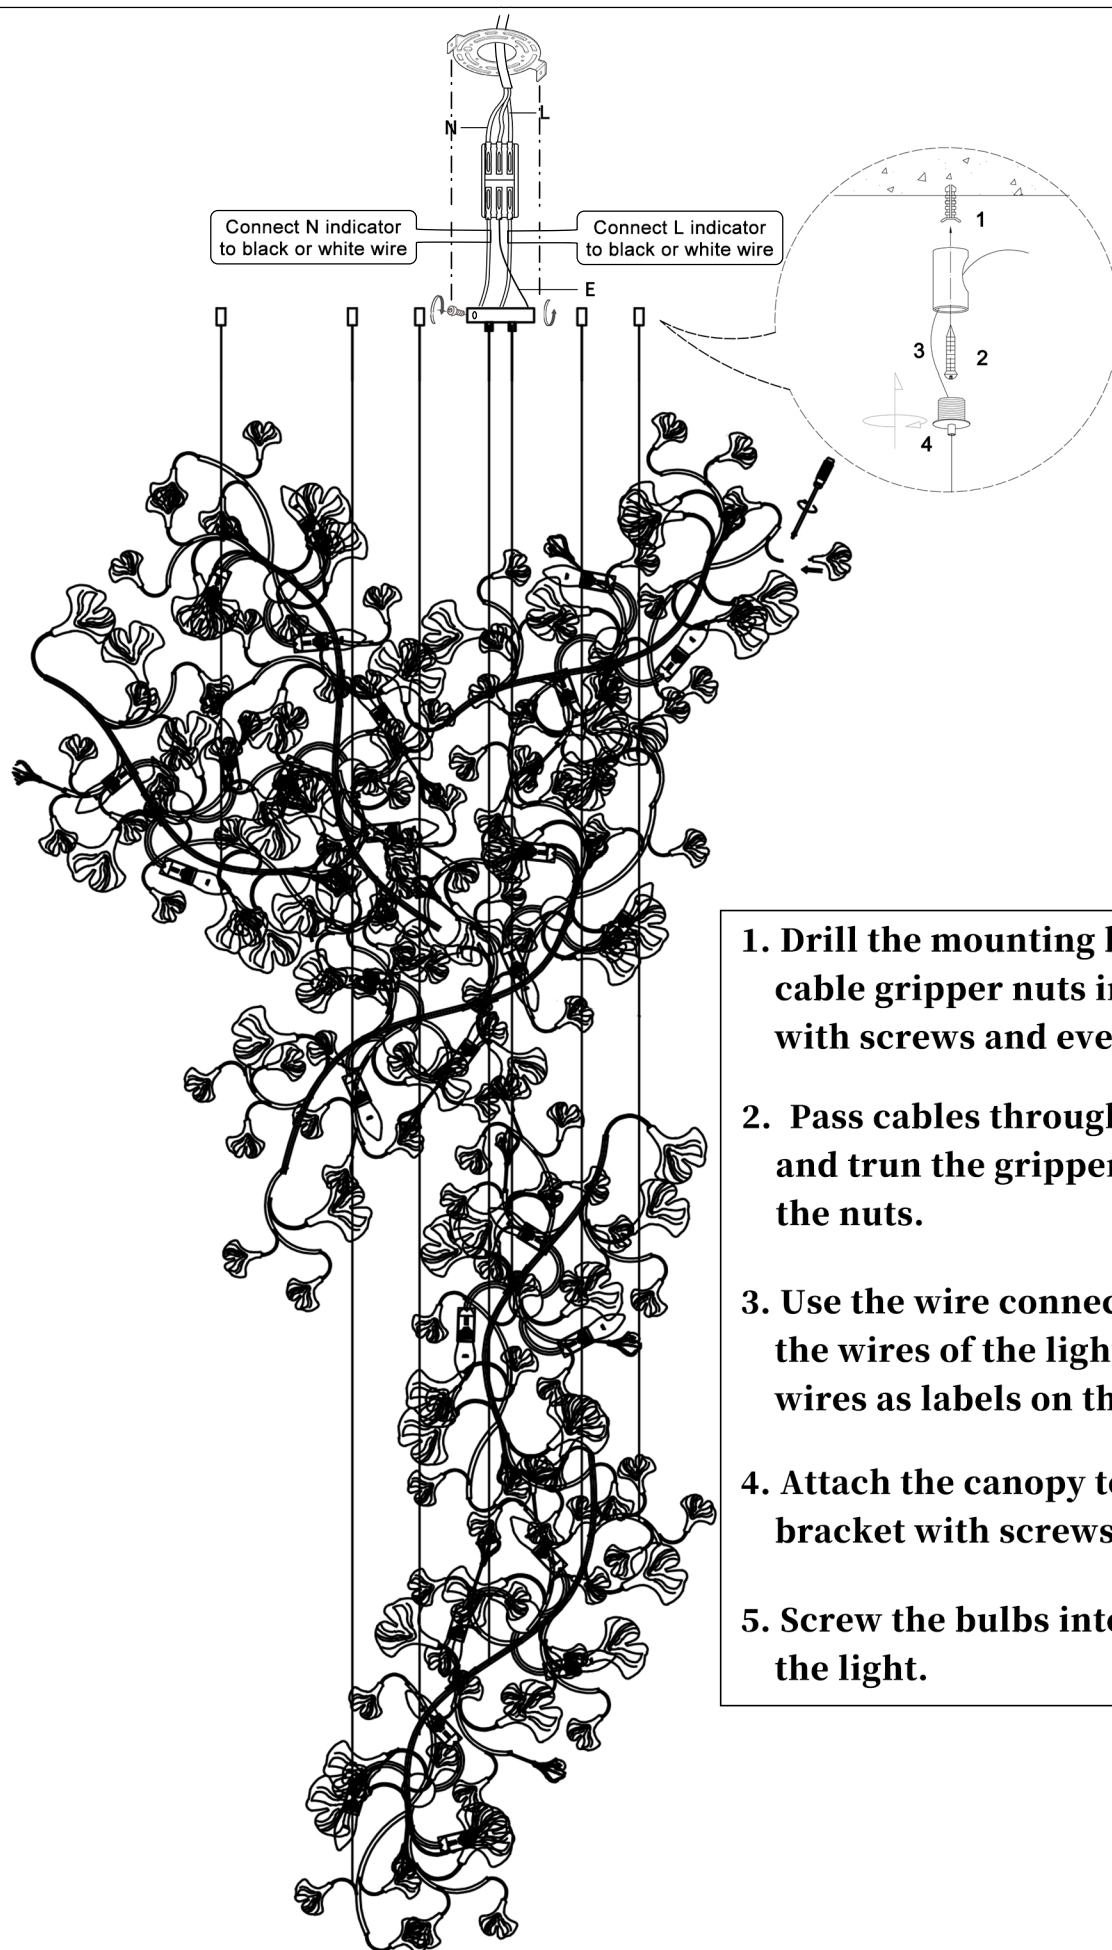

1. Drill the mounting bracket and cable gripper nuts into the ceiling with screws and even anchors.
2. Pass cables through cable grippers and turn the gripper screws into the nuts.
3. Use the wire connector to connect the wires of the light to the supply wires as labels on the wires indicate.
4. Attach the canopy to the mounting bracket with screws.
5. Screw the bulbs into sockets to test the light.