



Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

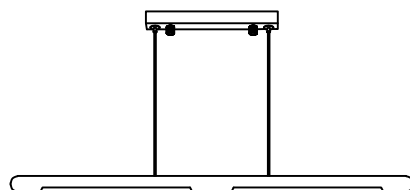


Product style diagram


Steps of installation

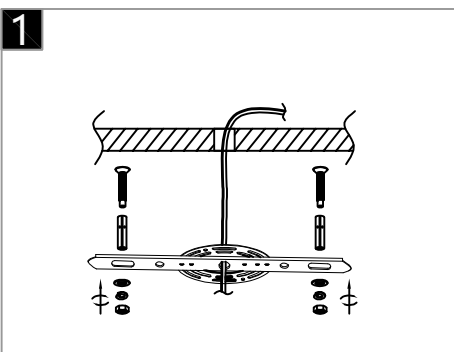


fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

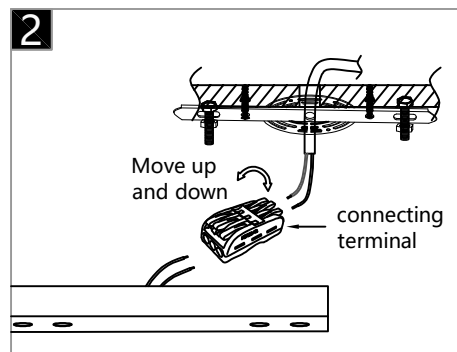

Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)

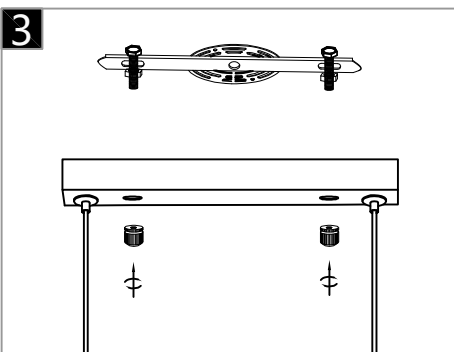


Align the top cover hole position on the luminaire with the screws on the mounting plate and then secure from the bottom using the nut.

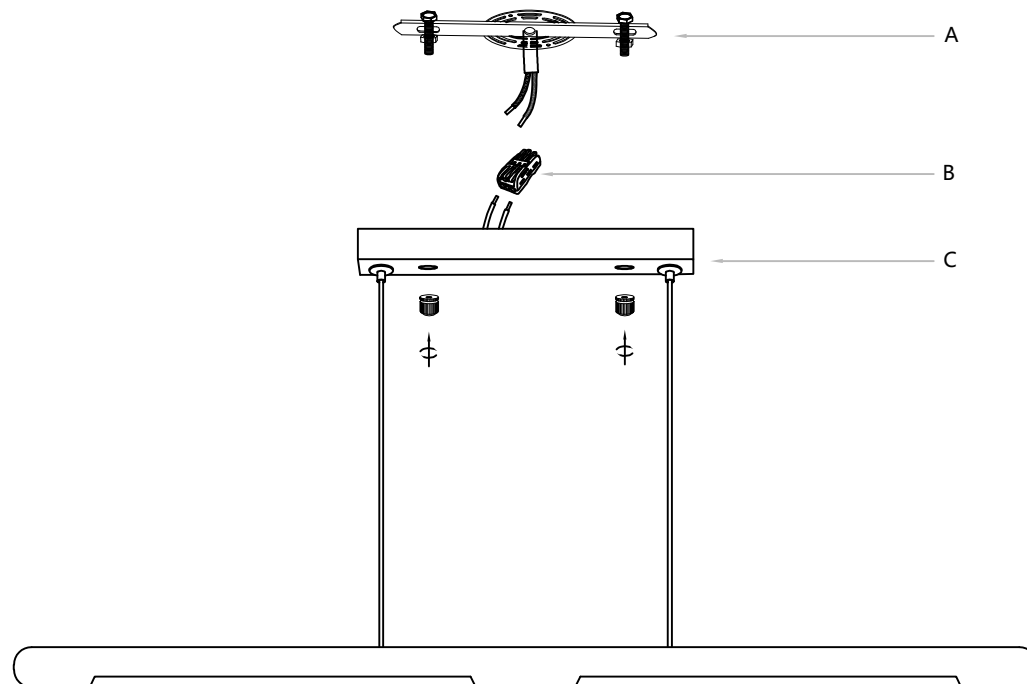

Fix the mounting plate (A) to the ceiling. Next, connect the wires reserved for the top cover (C) to the wires on the ceiling, and then connect them to the terminal block (B). Then, align the holes on the top cover (C) with the holes on the mounting plate (A), and tighten the screws.


Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

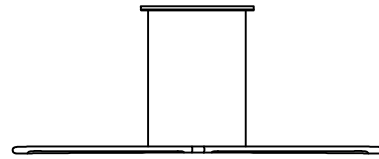


Product style diagram


Steps of installation

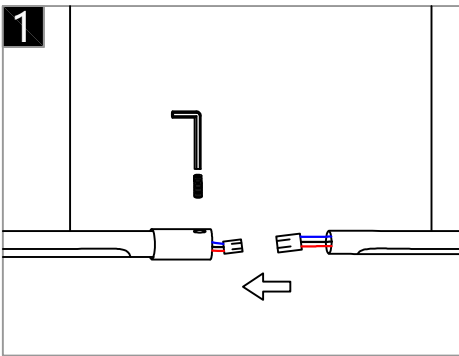


Insert the wires on the lamp arm into the lamp body box, and then secure them together with screws.

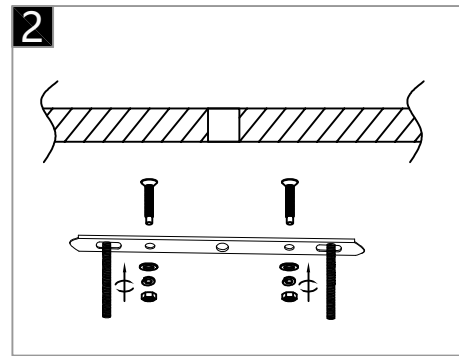


First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

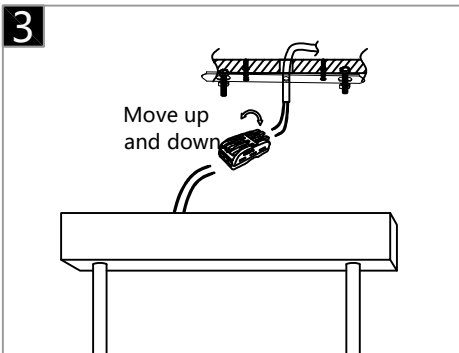

Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)

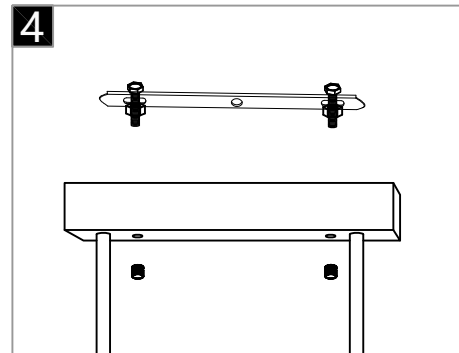

Align the bottom holes on the top cover with the screws on the mounting plate, and then tighten them with a wing nut.

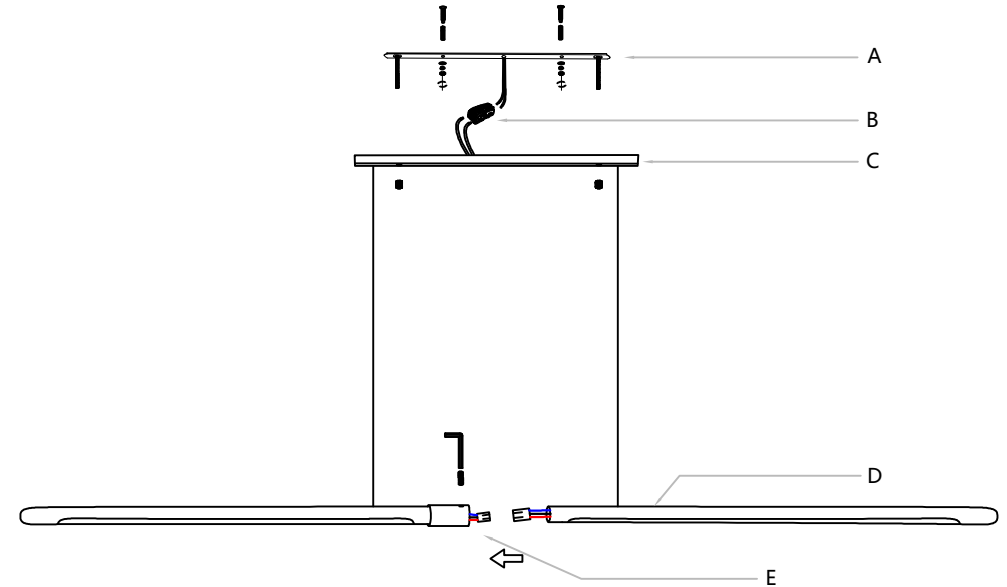

Insert the wires on the lamp arm (D) into the lamp body box (E), and then secure them together with screws. Fix the mounting plate (A) to the ceiling. Next, connect the wires reserved for the top cover (C) to the wires on the ceiling, and then connect them to the terminal block (B). Then, align the holes on the top cover (C) with the holes on the mounting plate (A), and tighten the screws.