


INSTALLATION GUIDE - WM2522

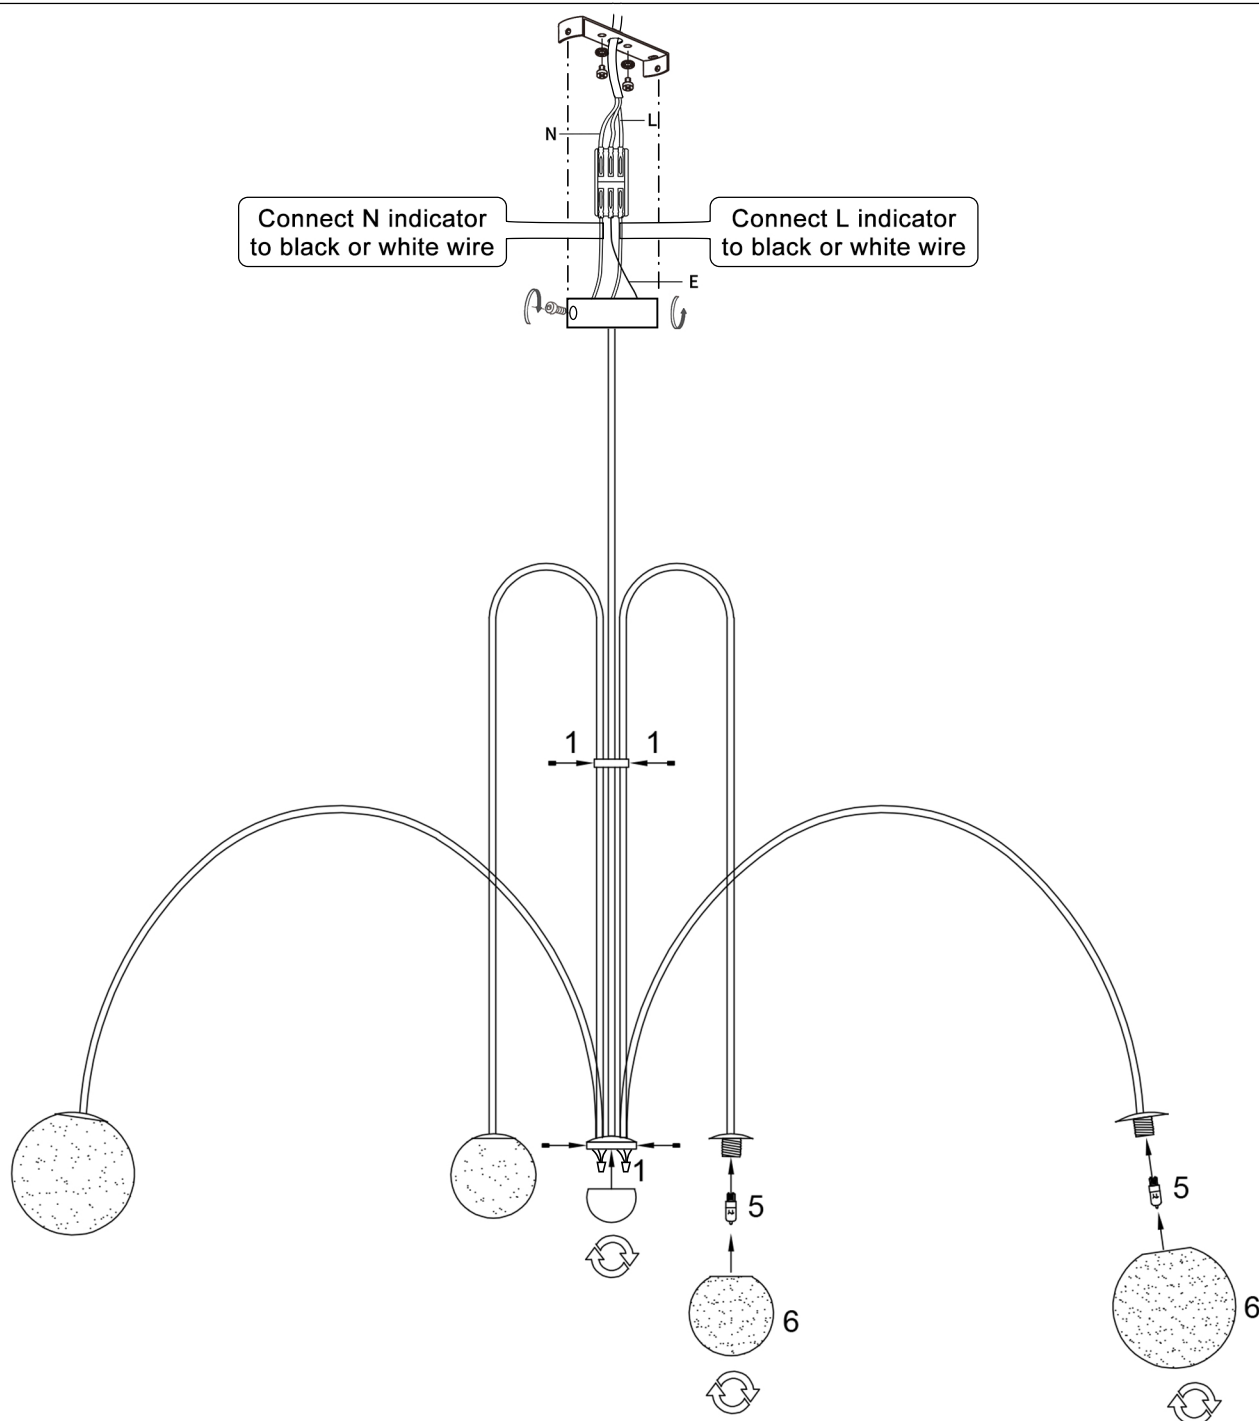

1. Attach the arms and downrods to the distributor plate with finger nuts.
2. Connect same color wires out of arms to the wires passed through downrods and cover them with a metal dome.
3. Drill the mounting brackets into the ceiling with screws and even anchors.
4. Use the wire connector to connect wires out of the light to the supply wires as indicated on the labels.
5. Attach the canopy to mounting bracket with screws.
6. Turn the power back on and flip on the light switch to test your light.