
INSTALLATION GUIDE - WM2764

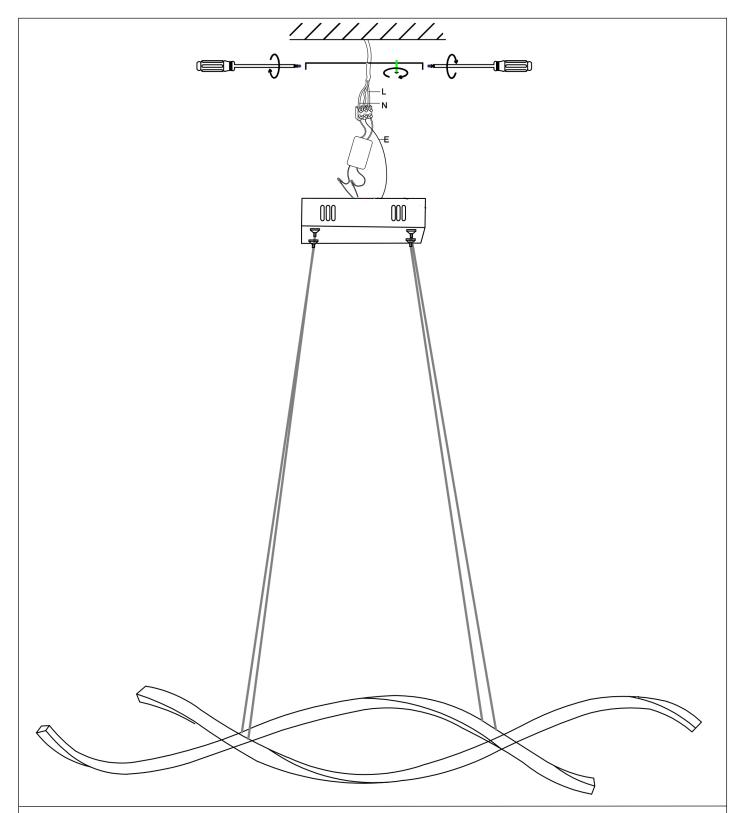

- 1. Drill the mounting bracket into the ceiling with screws and anchor bolts.
- 2. Use the wire connector to connect the wires of the light to the supply wires according to labels on the wires.
- 3. Align holes of the canopy with the mounting bracket and secure the canopy with screws
- 4. Push the cable grippers up to adjust the height of the light.

womolighting.com — contact@womolighting.com