



Warning:

This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

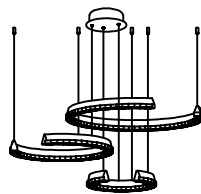


Product style diagram


Steps of installation

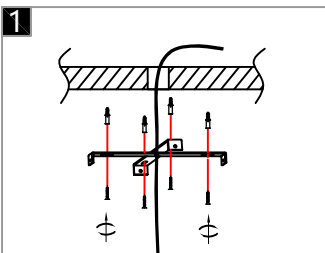


use self-tapping screws to fix the mounting plate (A) to the wall.

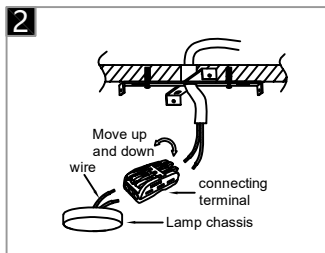

Connect the wires to the terminal blocks. Usually, the neutral wire (white) and the live wire (black).

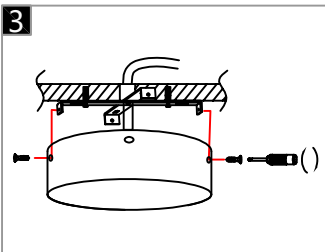


install the top cover onto the mounting plate .

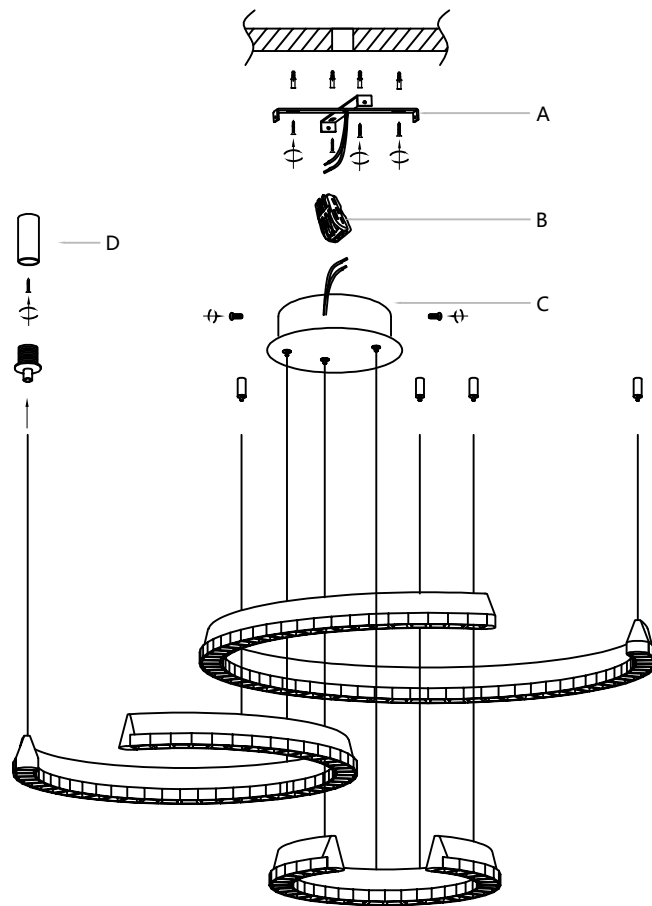

First, use self-tapping screws to fix the mounting plate (A) to the wall. Then, connect the reserved wires on the lamp body (C) to the reserved wires on the wall and the junction box (B). Next, install the lamp body (C) onto the mounting plate (A). Afterwards, install the locking wire holder (D) on the ceiling. Pass the steel wire through the telescopic head and secure it to the locking wire holder.

Warning:


This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications. This product is suitable for indoor installation.

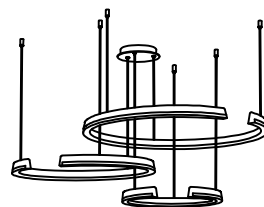

Product style diagram


Steps of installation

1

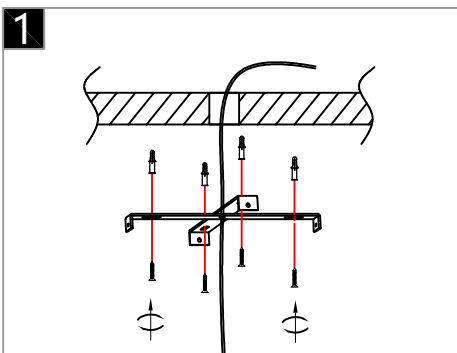


Attach the mounting plate to the ceiling with self-tapping screws.

2

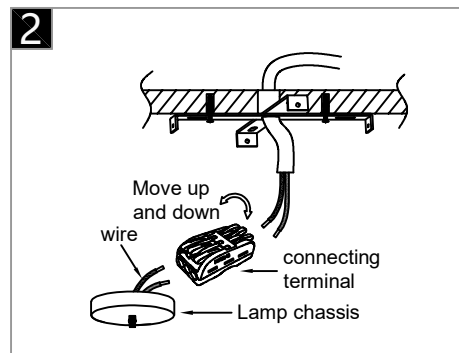


Connect the wires to the terminal blocks. Usually, the neutral wire (white) and the live wire (black).

3

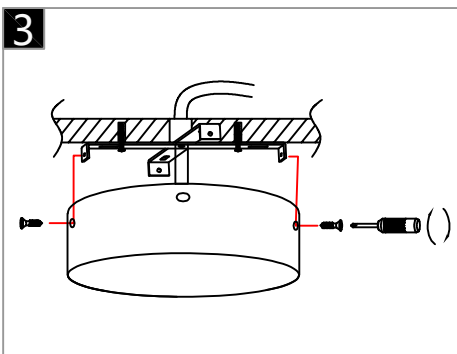


Align the hole on the side of the integral lamp canopy with the hole on the mounting plate and lock it tightly with screws.

4

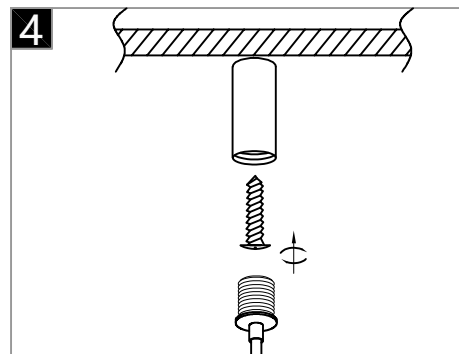

Place the iron pin at the desired Angle, then attach it to the ceiling with self-tapping screws, and then fasten it with locking wire. Screw it on the iron pin.

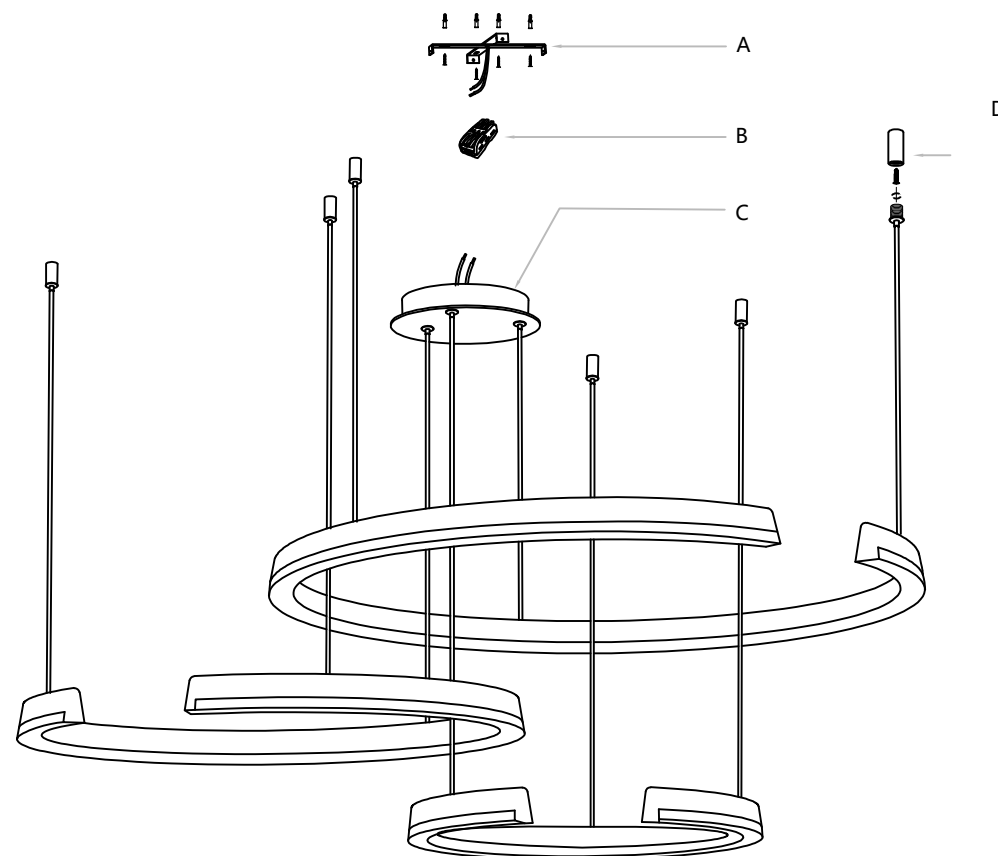

Place the iron nail (D) at the desired angle position, then fix it to the ceiling using a self-tapping screw, and then secure it with a locking line. Tighten the screw onto the iron nail (D). Fix the mounting plate (A) to the ceiling. Then, connect the wire (C) reserved for the top cover to the wire on the ceiling and the terminal (B). Next, align the holes on the top cover (C) with the holes on the mounting plate (A), and then tighten the screws.